

User Guide



Rechargeable Lint Remover

NBRUSLNTRMA

Safety & Warnings

- Read all instructions carefully before use and retain this user guide for future reference.
- Do not charge for more than 24 hours continuously. Avoid charging in extreme temperatures (0-40°C is recommended).
- Do not use in the bathroom or allow contact with water to prevent power failure.
- If abnormal events occur during charging, such as a strange smell or excessive heat, unplug the charger and stop using the device.
- Keep the device out of direct sunlight and away from heat-producing appliances when charging. Store it in a cool, dry place.
- The battery will gradually lose power if left unused for a long time. If the motor rotates slowly or power is insufficient, charge it promptly.
- Charging efficiency decreases significantly in extremely low or high temperatures, ultimately affecting battery life.
- Do not charge the device in direct sunlight or near heat radiators.
- Turn the 'Power' switch to the 'off' position while charging.
- Do not use on clothing while it is being worn.
- This device can be used on clothes, blankets, and upholstered furniture for trimming.
- Keep the device dry.
- Do not use the device on facial hair.
- Avoid applying excessive pressure when using the device on clothes.
- Do not use the device on clothing being worn on the body.

Operation

Charging

- Fully charge the device before first use.
- Connect one end of the provided charging cable to the device, and the other end to a USB power adaptor (not provided).
- The indicator illuminates red while charging. A full charge takes approximately 8 hours.
- Unplug the charger after charging to prevent overcharging.
- Charge the battery before it is completely drained to extend battery life.


Using the Device

- Place the clothing on a flat surface. Move the shaver gently while using it. Avoid applying excessive pressure.
- Pay special attention to areas with heavy lint buildup to prevent fabric damage.
- The protective spacer helps prevent damage to clothing. Do not remove it when using the shaver on cashmere sweaters.

Clothing Types

Knitted Patterns

Slide the device in the direction of the pattern.

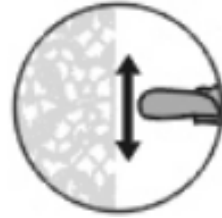

Faster Trimming

Use small movements, sliding the device from right to left.



Removing Stubborn Lint

Slide the device both horizontally and vertically over the fabric.



Clothing with Embellishments or Uneven Surfaces

Move the device around the uneven areas carefully.



Cleaning & Care

1. Turn the 'Power' switch to the 'off' position.
2. Use the cleaning brush to clean the blade cover and lint collector.
3. Remove the lint collector and clean the lint balls inside.
4. After cleaning, reinstall the lint collector securely onto the device.

Specifications


Charging input

5V 

Rated power

3W

Disposal

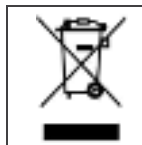

This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

